

RTE Drivers DVR05/DVA05 For HP 263X/264X Terminals

PRINTING HISTORY

The Printing History below identifies the Edition of this Manual and any Updates that are included. Periodically, Update packages are distributed which contain replacement pages to be merged into the manual, including an updated copy of this Printing History page. Also, the update may contain write-in instructions.

Each reprinting of this manual will incorporate all past Updates, however, no new information will be added. Thus, the reprinted copy will be identical in content to prior printings of the same edition with its user-inserted update information. New editions of this manual will contain new information, as well as all Updates.

To determine what manual edition and update is compatible with your current software revision code, refer to the appropriate Software Numbering Catalog, Software Product Catalog, or Diagnostic Configurator Manual.

Seventh Edition	Feb 1980	
Update 1	Oct 1980	
Reprint	May 1981	Update 1 incorporated
Update 2	Oct 1981	
Reprint	Oct 1981	Update 2 incorporated
Update 3	Oct 1983	
Reprint	Oct 1983	Update 3 incorporated

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

Hewlett-Packard assumes no responsibility for the use or reliability of its software on equipment that is not furnished by Hewlett-Packard.

This document contains proprietary information which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another program language without the prior written consent of Hewlett-Packard Company.

CONTENTS

Section I	Page	Printer List Request	2-10
GENERAL INFORMATION		Status Request	2-11
Components	1-1	Additional DVA05 Control Requests	2-13
Operating Environment	1-2	Terminal Initialization	2-13
		Line Control Request With Manual Answer	2-15
		Line Control Request With Auto Answer	2-15
		Example With Modem Operation	2-16
		Protocol	2-17
Section II	Page		
APPLICATION INFORMATION		Section III	Page
Calling Sequences	2-2	CONFIGURATION INFORMATION	
Display Control Request	2-3	Generation Procedure	3-1
Keyboard-Display Read/Write Request	2-4	Program Input Phase	3-1
CTU Control Request	2-7	Table Generation Phase	3-1
CTU Read/Write Request	2-8		
Printer Control Request	2-10		

ILLUSTRATIONS

Title	Page	Title	Page
Hardware Connections	1-3	CTU Positioning Illustration	2-7

TABLES

Title	Page	Title	Page
DVR05 and Hardwired DVA05		Printer Control Request	2-10
Calling Sequences	2-1	264X Printer List Request	2-11
DVA05 (over modem) Calling Sequences	2-2	Status Request	2-12
Display Control Request	2-3	EQT5 (ISTA1)	2-12
Keyboard-Display Read/Write Request	2-4	Terminal Initialization Request	2-14
CTU Control Request	2-8	Line Control Request — Manual Answer	2-15
CTU Read/Write Request	2-9	Line Control Request — Auto Answer	2-16

GENERAL INFORMATION

SECTION

I

This manual contains information and procedures that allow you to write application programs using FORTRAN or HP Assembly Language to call RTE driver DVR05 or RTE driver DVA05. This section introduces the drivers' components and the operating environment required; Section II describes the available program calling sequences for the drivers; and Section III provides the information you need when incorporating DVR05 or DVA05 into an RTE operating system.

DVR05 is used to control I/O data transmissions of the following terminals, operating either as system consoles or as auxiliary terminals; no other terminals are supported with DVR05.

DVA05 is a modified version of DVR05 that provides all the capabilities of DVR05, plus full-duplex asynchronous modem support for Bell 103 or equivalent (Vadic 3400) type modems. Note that DVA05 defaults to hardwired DVA05 on system bootup, and the control requests that are specific to DVA05 over modems are not applicable unless the user specifies a Terminal Initialization request.

Terminal Model (with option)	DVR05 Part No.	Approximate Size (words)
2635 (with Maximum Board)	92001-16028	900
2640A	92001-16028	900
2640B	92001-16028	900
2645A (with Extended Asynchronous Data Comm.)	92001-16028	900
2644A (020)	92001-16027	1350
264X (with Cassettes and Ext. Async. Data Comm.)	92001-16027	1350
2645A (with device support firmware)	92001-16027	1350
262X	92001-16027	1350

Terminal Model	DVA05 Part No.	Approximate Size (words)
all terminal models (see Tables 2-1 and 2-2)	92001-16035	1600

If your RTE system requires punched paper tape read/write capability, RTE DVR00 will be required.

Note that except where otherwise specified in text, all references to DVR05 pertain equally to DVA05. Also, references to RTE refer specifically to RTE-II/III, IV, IVB, 6/VM, and all versions of RTE-M.

1-1. COMPONENTS

The following components are included with DVR05 (only):

- a. This manual, part number 92001-90015.
- b. The binary files named %4DV05 (for 92001-16027) and %0DV05 (for 92001-16028).

General Information

The following components are included with DVA05 (only):

- a. This manual, part number 92001-90015.
- b. The binary file named %DVA05 (for 92001-16035).

1-2. OPERATING ENVIRONMENT

The operating environment for DVR05 or DVA05 over hardwired connections must be:

- a. HP 1000, M, E, or F-Series computer.
- b. RTE software operating system.
(DVR05 revision code 1740 or greater requires RTE software revision code 1740 or greater).
- c. HP 12966A Buffered Asynchronous Data Set Interface Kit with optional cable configurations.
- d. Terminals directly connected to the 12966 PCA (modems not allowed).

Optional for 264X and 262X terminals: supported external printers.

The operating environment for DVA05 (with modems) must be:

- a. HP 1000 M,E, or F-Series computer.
- b. RTE software (revision code 1740 or greater) operating system.
- c. HP 12966A Buffered Asynchronous Data Set Interface Kit with Option 002.
- d. Terminals connected to full-duplex asynchronous modems (Bell 103 or equivalent).
- e. Terminal modem cable for 103 modems.
- f. Time Base Generator in RTE system.

Note that DVA05 (over modems) is not intended for use with the system console.

Optional for 264X and 262X terminals: supported external printers.

Figure 1-1 shows the hardware connections from the interface cards to the terminals for both DVR05 and DVA05.

Terminal communications card (part number 02640-60089) switches must be set as follows for DVR05 or DVA05. Note that you can find switch locations in the *HP 13250A Accessory Manual*, part number 02640-90042.

- a. Switches S1 through S3: all open.
- b. S4: all open except A9, A10, A11, and THE.

Terminal communications card (part no. 02640-60239) switches must be set as follows for DVR05 or DVA05:

THE: open (for DVR00 operation, close THE)
600: closed
EBE: open
200: closed

Terminal PCA part number 02640-60019 must be strapped as follows. Note that some terminals have switches rather than straps; an installed strap is the same as a closed switch.

- a. Straps A, B, G, and H: closed.
- b. Straps C, D, E, and F: as desired.
- c. For the 2640B and 2645 only, switches J through Z: closed, except for switches R, U, and V, which are open.

For the 2635, switches and jumpers must be set as follows:

1. The maximum communications card (02631-60009) is required. On this card, W9 is jumpered as below:
 - a. Jumper W9 in for DVR05 (revision code 1650 and earlier) and for DVA05 over modems.
 - b. Jumper W9 out for DVR05 (revision code 1740) and hardwired DVA05.
2. All S1 switches closed for 9600 Baud Rate. See the 2635 manual for other baud rates.
3. S2 switches on 02631-60009 set as follows:

S2(1), S2(2), S2(3), S2(4), and S2(5): all open.
S2(6), S2(7): closed.
S2(8): selected by user (see 2635 manual for switch descriptions).

Refer to the appropriate service manual for strap locations and descriptions.

The switches on the extended serial interface (02631-60159) should be set as follows:

S1(1), S1(2), S1(5), and S1(6): all closed.
S1(3), S1(4), S1(7), and S1(8): all open.
S2: all open
S3: CH off
Jumpers W6 and W10 installed.

Refer to the HP 2630 Family Reference Manual (02635-90905) for more information.

General Information

Terminal front-panel switches listed below must be set as indicated:

Switch	Position
DUPLEX	FULL
BAUD RATE	User Selected (AUX for 2635)
REMOTE	Latched in
AUTO LF	Latched out
DISPLAY FUNCTIONS	Latched out
CAPS LOCK	Latched in (for communication with the RTE system)
PARITY - Hardwired	NONE
- Modem	As selected by user for keyboard/CRT and CTU ASCII only. No parity for CTU binary.

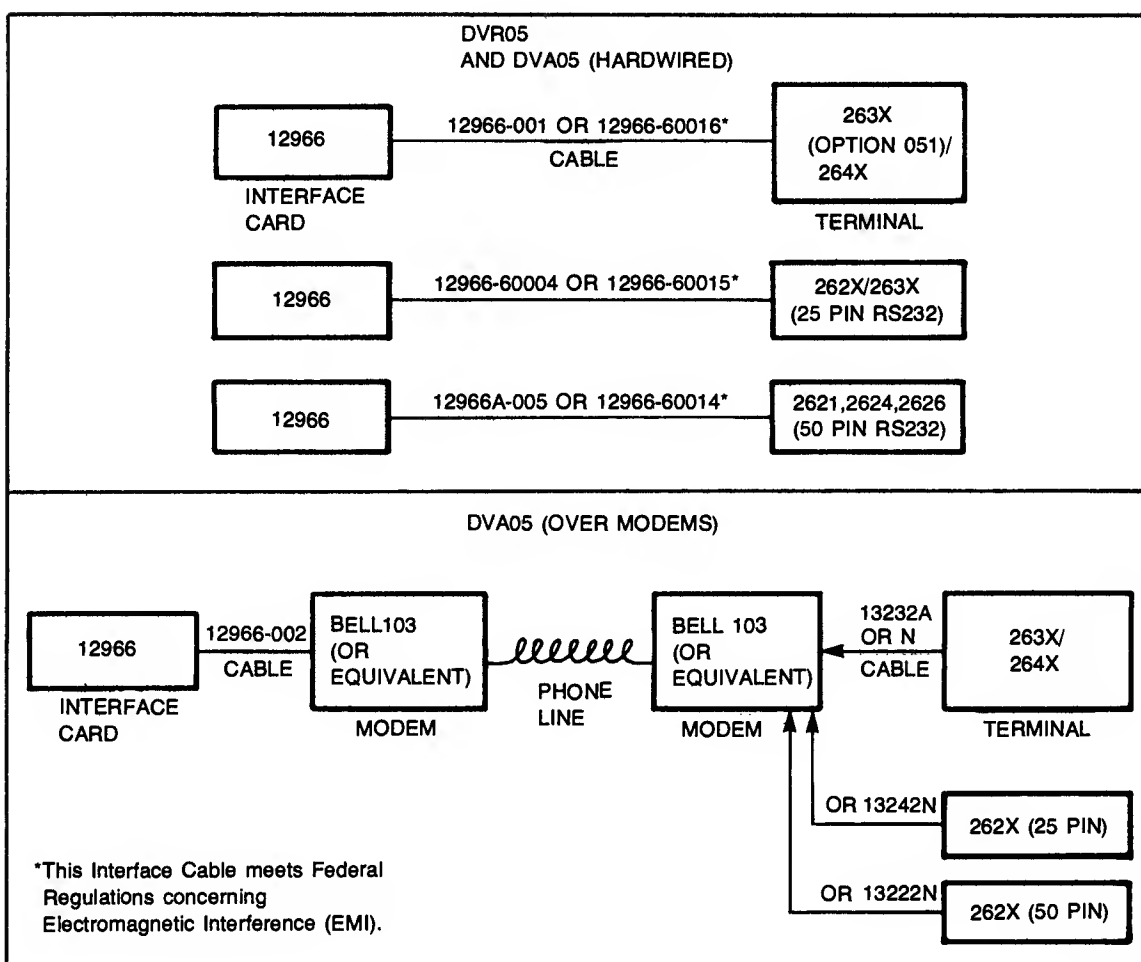


Figure 1-1. Hardware Connections

APPLICATION INFORMATION

SECTION

II

This section describes the driver calls and provides information on software/hardware conditions that may influence programming techniques.

Before writing programs using DVR05 or DVA05, it is recommended that you familiarize yourself with the appropriate Terminal Owner's Manual, and the strapping options part of the appropriate Terminal Service Manual.

Drivers DVR05 and DVA05 can communicate with the RTE system in ASCII or binary codes and in either character or block mode. The user can strap the terminal for line-by-line or page-by-page data transmission to the computer.

Table 2-1 relates the currently supported terminal models to the calling sequences you can code with DVR05 or hardwired DVA05.

Table 2-1. DVR05 and Hardwired DVA05 Calling Sequences

Terminal Model (and option)	Calling Sequences Allowed						
	Display Control	Keyboard-Display Read/Write	CTU Control	CTU Read/Write	Printer Control	Printer List	Status
2640A/B	Yes	Yes	No	No	No	No	Yes
2644A with Ext. Async Data Comm. I/F	Yes	Yes	Yes	Yes	Yes	Yes	Yes
2645A/2648 with Ext. Async Data Comm. I/F	Yes	Yes	No	No	No	No	Yes
264X with Cas- sette and Ext. Async Data Comm. I/F	Yes	Yes	Yes	Yes	Yes	Yes	Yes
264X with Device Support Firmware	Yes	Yes	No	No	Yes	Yes	Yes
2635	Yes	Yes	No	No	No	No	Yes
262X	Yes	Yes	No	No	Yes	Yes	Yes

Table 2-2 relates the currently supported terminal models to the calling sequences you can code with DVA05 over modems.

Table 2-2. DVA05 (over modem) Calling Sequences

Terminal Model (with option)	Calling Sequences Allowed							
	Display Control	Keyboard-Display Read/Write	CTU Control	CTU Read/Write	Printer Control	Printer List	Status	Modem Operation
2640A/B	Yes	Yes	No	No	No	No	Yes	Yes
2644 with Ext. Async Data Comm. I/F	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
2645/2648 with Ext. Async Data Comm. I/F	Yes	Yes	No	No	No	No	Yes	Yes
264X with Cassette and Ext. Async Data Comm. I/F	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
264X with Device Support Firmware	Yes	Yes	No	No	Yes	Yes	Yes	Yes
2635	Yes	Yes	No	No	No	No	Yes	Yes
262X	Yes	Yes	No	No	Yes	Yes	Yes	Yes

NOTE

Writing binary data to the display, or incorrectly specifying the data type (ASCII or Binary) when reading from a CTU may cause unpredictable results. For example, if there is no system response to keyboard input, try this: press RESET key. When the CTU EQT times out, a system time-out message will be sent to the display, thereby enabling keyboard input. If the terminal is operating under MTM control and there is no response to keyboard input, try this: press RESET key; remove any I/O requests pending to the terminal (from the console), then enable the terminal with the File Manager command CN, *lu*, 20B.

2-1. CALLING SEQUENCES

The following paragraphs describe the driver calling formats in both FORTRAN and HP Assembly Languages.

Note that DVA05 has three additional requests (see Sections 2-9, 2-10, 2-11, and 2-12) that allow modem support.

2-2. DISPLAY CONTROL REQUEST

Table 2-3 shows the control request formats for the display. The control word (ICNWD) parameter specifies the logical unit (LU) number of the display and the control function code. The functions are:

- a. Enable terminal: this allows a terminal to schedule a program (assigned to the terminal during RTE generation) when the operator initially presses any terminal key. If the terminal is used as the system console, the program outputs the system prompt character (*). If the terminal is an auxiliary terminal, the system outputs the terminal LU and a prompt (> or an RTE Session Monitor prompt). In any case, a prompt means that the system is ready to accept input from the operator. (If the terminal is performing an operation and you wish to interrupt the system, you can get a new prompt by simultaneously pressing the space bar and RETURN key several times.)

CAUTION

When attempting to get system attention, never depress more than three keys at the same time: to do so may cause the EQT to time out. Also, never use the BREAK key to get the system's attention. On the 2635 terminal, the REPEAT key and an adjacent key should be depressed simultaneously to get the system's attention.

- b. Disable terminal: this "locks" a terminal keyboard out of the system. System cannot respond to keyboard.)

Table 2-3. Display Control Request

Assembly Language	Where:
EXT EXEC . . JSB EXEC DEF *+3 (or 4) DEF ICODE DEF ICNWD DEF IPRM1	ICODE = Request Code 3 = Control Request ICNWD = Control Word Bits 0 thru 5 = LU number of display Bits 6 thru 10 = Function code 11 = Line spacing 20 = Enable terminal 21 = Disable terminal 22 = Set read time out 23 = Buffer flush 24 = Restore output processing 25 = Update terminal configuration 34 = Set write time out IPRM1 = Optional parameter. Used to set time out (tens of milliseconds) if function code 22 or 34 is set, or lines to be spaced for function code = 11. FORTRAN CALL EXEC (3,ICNWD [,IPRM1])

- c. Set read time out: this, along with parameter IPRM1, sets a new RTE device time-out value for keyboard input, allowing the user to change the time-out value specified at generation time.
- d. Buffer flush: driver ignores all further action until:
 - (1) Buffer is empty or
 - (2) An input request is received or
 - (3) A restore output processing request is received.
- e. Restore output processing: this request enables output processing to resume following a buffer flush.
- f. Line spacing: the optional parameter specifies the number of lines to be spaced. The maximum number of lines which can be spaced in one request is 55 lines.
- g. Update terminal configuration: The first time the driver is entered after system bootup, DVR05 reads the terminal status to determine Line or Page strapping. If the user changes the strapping after bootup, this update request must be issued to notify DVR05 of the change.
- h. Set write time out: this, along with parameter IPRM1, sets a new value for the display write timeout. The value defaults to approximately 3.8 seconds at system boot-up. IPRM1 is in units of 10 milliseconds.

2-3. KEYBOARD-DISPLAY READ/WRITE REQUEST

Table 2-4 shows read/write request formats for the keyboard-display. The request code (ICODE) parameter specifies read or write, and ICNWD specifies the terminal's LU and function code. The functions are:

Table 2-4. Keyboard-Display Read/Write Request

Assembly Language	Where:
EXT EXEC . JSB EXEC DEF *+5 DEF ICODE DEF ICNWD DEF IBUFR DEF IBUFL	ICODE = Request Code 1 = Read keyboard 2 = Write to display ICNWD = Control Word Bits 0 thru 5 = Logical unit of terminal Bits 6 thru 10 = Function Code Bit 6 = 0 Bit 8 = 1 = Echo "on" 0 = Echo "off" Bits 9 & 10 = 11 = Program enabled block read Bit 10 = 01 = Transparent Mode, terminal enabled character or block read = 00 = Non-Transparent Mode, terminal enabled character or block read = 10 = Unused IBUFR = Address of first word of I/O buffer IBUFL = I/O buffer length = n if specified as 16-bit words = -n if specified as 8-bit characters
FORTRAN	CALL EXEC (ICODE, ICNWD, IBUFR, IBUFL)

- a. Echo "on"/echo "off". This enables (or prevents) the HP 12966 I/O Card to automatically return (echo "on") a character to the display as it is received from the keyboard.
- b. Transparent mode/non-transparent mode. As discussed later, this determines the processing mode for certain special characters.

The Read/Write request covers three types of data transmission as follows:

- a. Write to display.
- b. Read from keyboard in character mode.
- c. Read from keyboard in block mode (BLOCK MODE key latched in).

When you program a display write request, consider the following:

- The output is a string of ASCII characters from a buffer in which each word contains two characters. The buffer length (IBUFL) must be specified by a positive integer if you count the words or by a negative integer if you count the characters. In either case, the driver terminates the character string by supplying a carriage return (CR) and line feed (LF).
- The length of the buffer should be limited to 80 displayable characters unless the terminal's Cursor End-of-Line Wrap Around strap is installed.
- In the transparent write function, if there are any underscore characters (ASCII 137 octal) in the buffer, they are output to the display but the driver does not supply CR and LF. In the non-transparent write, if an underscore character is the last word in the buffer, neither it nor CR and LF are output to the display.
- The write request can control programmable functions requiring escape code sequences defined in the owner's manual for the terminal.
- The driver strips out all ESC characters from binary writes to the display; it does not supply CR and LF.
- If the LU points to an EQT with subchannel 3, the output is preceded with ESC*1 (small "I"). Subchannel 3 is used to invoke label mode with the 2648 Graphics Terminal.

For keyboard read requests, the driver always sends a DC1 code to the terminal prior to setting the I/O card to the receive mode. Therefore, when reading cursor status or other special terminal information, do not explicitly send a DC1 in your write buffer; send only the escape sequence up to the DC1. The DC1 that triggers the terminal transfer will be supplied by DVR05/DVA05 in the read request. The driver distinguishes block and character modes by examining the first character received from the keyboard. If it is a DC2 (ASCII 22 octal), the driver assumes the ENTER key was pressed and a block transmission is pending; the driver responds with DC1 to trigger the block transfer. If the first character is not a DC2, the driver assumes a character transfer is pending.

For a character mode keyboard read request (BLOCK MODE key latched out), consider the following:

- The terminal transmits one character at a time as a key is pressed. The record terminator is a CR or RS (record separator) and must be entered to complete the request (the terminator is not sent to the user's buffer). The driver echos a line feed (LF) and returns

Application Information

the transmission log (number of character/words sent) in the B register. The transmission log in the B-register is used to determine how much of IBUFR can be used. Any unused portion of the data buffer may or may not be cleared. If a CR is the first character, the driver returns a zero transmission log.

- In the non-transparent character mode, the driver processes the following special characters:

DEL (RUBOUT, ASCII 177 octal). Entering DEL (shift and underscore keys) deletes the current record and outputs a backslash (\), CR, and LF; this is used to delete the line and start a new line.

BACKSPACE (ASCII 10 octal). Pressing the BACKSPACE key deletes the last character; the terminal's cursor moves back one position.

LINE FEED (ASCII 12 octal). A line feed (LF) is echoed back to the display but is not sent to the user's buffer.

CONTROL D (ASCII 4). Entering Control D (CNTL and D keys) terminates data transmission and sets status word bit 5 to "1" with all zeros in the B register.

- In the transparent mode, the special characters listed above are not processed by the driver but are passed to the user's buffer.

For a block mode keyboard read request (transmit from keyboard), consider the following:

- In block mode (BLOCK MODE key latched in), terminal transmissions are either line-by-line (line strapping) or page-by-page (page strapping). The DEL, BACKSPACE, LINE FEED, and CNTL D keys have no special meaning.

NOTE

If RTE File Manager requests are used for data transfer, data blocks longer than 128 words are truncated.

- The first time the driver is entered after system bootup, DVR05 reads the terminal status to determine Line or Page strapping. If the user changes the strapping after bootup, an update request must be issued to notify DVR05 of the change.
- With line strapping, the data terminator (CR) and RS's are not passed to the user's buffer.
- With page strapping, line separators (CR,LF) are passed to the user's buffer but the data terminator (RS) is not.
- With both strapping options if bits 9 and 10 are set the unit separator (US) is not passed to the user's buffer.
- If program enabled block read is used (bit 9 and 10 = 1) then immediately prior to the read, a write "ESC d" request must have been issued.
- For terminal enabled block read (bits 9 and 10 = 0) the user must press the ENTER key.
- If bit 6 is set, characters are entered into the user buffer until it is full. No processing of the characters (e.g., backspaces) is performed.

2-4. CTU CONTROL REQUEST

Table 2-5 shows the request formats for controlling a cartridge tape unit (CTU) in a Terminal. The control word (ICNWD) specifies cartridge LU and function code. When you program a CTU control request, note the following.

- A rewind, backspace one record, or backspace one file request does not cause any action if the CTU is at the load point (beginning of tape). The load point condition is reported in the status word.
- If a terminal is Page Strapped, the BLOCK MODE key must be latched out for CTU operation.
- For dynamic status requests, the A-register contains EQT word 5 of left or right CTU (depending upon which LU is being addressed).

Below are given the various requests that allow positioning of the CTU. Figure 2-1 illustrates the points where the tape will be positioned (in this example) after each request.

- Forward space one file (function code 13): If at A, will move to B.
If at B, will move to E.
- Backspace one file (function code 14): If at C, will move to A.
If at E, will move to D.
- Forward space one record (function code 03): If at A, will move to B.
If at B, will move to C.
- Backspace one record (function code 02): If at B, will move to A.
If at C, will move to B.

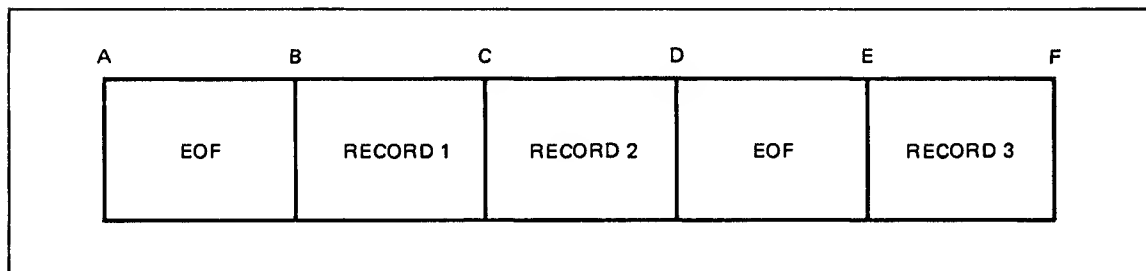


Figure 2-1. CTU Positioning Illustration

NOTE

For a one record file directly in front of the load point, with the tape positioned after the EOF mark, the backspace one record command will position the tape to the load point. This condition can be found programmatically by testing status for "load point and not EOF". The user can then space forward one record.

Note: For a one record file directly in front of the load point, with the tape positioned after the EOF mark, the backspace one record command will position the tape to the load point. This condition can be found programmatically by testing status for "load point and not EOF". The user can then space forward one record.

Table 2-5. CTU Control Request

Assembly Language	<p>Where:</p> <p>ICODE = Request Code 3 = Control Request</p> <p>ICNWD = Control Word Bits 0 thru 5 = Logical unit number of CTU</p> <p>Bits 6 thru 10 = Function Code</p> <table border="0"> <tr><td>01</td><td>= Write end-of-file (EOF)</td></tr> <tr><td>02</td><td>= Backspace one record</td></tr> <tr><td>03</td><td>= Forward space one record</td></tr> <tr><td>04</td><td>= Rewind</td></tr> <tr><td>05</td><td>= Rewind</td></tr> <tr><td>06</td><td>= Dynamic Status</td></tr> <tr><td>10</td><td>= Write EOF if not just previously written or not at load point</td></tr> <tr><td>13</td><td>= Forward space one file</td></tr> <tr><td>14</td><td>= Backspace one file</td></tr> <tr><td>26</td><td>= Write End-of-Data (EOD)</td></tr> <tr><td>27</td><td>= Locate absolute file IPRM1 IPRM1 (less than 256)</td></tr> </table> <p>All unused = Set to 0 bits</p> <p>Note: Motion requests (codes 2-5 and 13-27) set transmission log to zero.</p> <p>IPRM1 = Absolute file number if function code set to 27</p>	01	= Write end-of-file (EOF)	02	= Backspace one record	03	= Forward space one record	04	= Rewind	05	= Rewind	06	= Dynamic Status	10	= Write EOF if not just previously written or not at load point	13	= Forward space one file	14	= Backspace one file	26	= Write End-of-Data (EOD)	27	= Locate absolute file IPRM1 IPRM1 (less than 256)
01	= Write end-of-file (EOF)																						
02	= Backspace one record																						
03	= Forward space one record																						
04	= Rewind																						
05	= Rewind																						
06	= Dynamic Status																						
10	= Write EOF if not just previously written or not at load point																						
13	= Forward space one file																						
14	= Backspace one file																						
26	= Write End-of-Data (EOD)																						
27	= Locate absolute file IPRM1 IPRM1 (less than 256)																						
<p>EXT EXEC</p> <p>.</p> <p>JSB EXEC</p> <p>DEF *+3 (or 4)</p> <p>DEF ICODE</p> <p>DEF ICNWD</p> <p>DEF IPRM1</p>																							
FORTRAN	CALL EXEC (3, ICNWD [,IPRM1])																						

2-5. CTU READ/WRITE REQUEST

Table 2-6 shows the read-write request formats for a cartridge tape unit (CTU) in a terminal. The request code (ICODE) specified read or write, and ICNWD specifies the CTU's LU and function code. Note that you must specify the buffer length (IBUFL) by a positive integer if you count the words or by a negative integer for characters. When programming a CTU read/write request, note the following.

- If terminal is Page Strapped, BLOCK MODE key must be latched out for CTU operation.
- A binary read request inputs (via the driver) a word (or character) string to a buffer of specified length. If the buffer is filled before an End-of-Record (EOR) is read, the driver ignores the remaining data and stops the CTU at the first EOR it reads. If an EOR is read before the specified length is filled, the CTU stops at the EOR. The maximum buffer length is 128 words; if a greater length is specified, the driver rejects the request (system outputs error code IO07). The CTU skips one record if the buffer length is specified as zero.

- A binary write outputs (via the driver) a word (or character) string from a buffer of specified length. The maximum buffer length is 128 words; if a greater length is specified (or if the length is specified as zero), the driver rejects the request.
- Before a binary transmission, the operator must issue a Terminal Initialization request (see Table 2-11) for no parity, and also set the terminal for no parity.
- An ASCII read request inputs (via the driver) a word (or character) string terminated by a carriage return (CR). If the specified buffer length is filled before a CR is read, the driver ignores the remaining characters; however, a CR must still be read in order to complete the request. The maximum buffer length is 127 words.
- An ASCII write request outputs (via the driver) a word (or character) string from a buffer of specified length. Maximum buffer length is 127 words (the driver supplies a CR). The driver terminates the request if the string includes a CR, LF, or RS. (The driver uses CR as a record terminator on input and the terminal uses LF as a terminator on output; an RS is passed to the driver when the CTU encounters a file gap.)
- If the End-of-Tape (EOT) point is sensed during a write operation, an End-of-Data (EOD) mark is recorded automatically; the driver completes the current record. Further attempts to write will cause DVR05 to reject the request with the A-register = 1 (not ready). Similarly, the driver reads the current record if an EOD is sensed during a read operation. Either condition (EOT or EOD) is reported in the status word. Further attempts to read past EOT will cause the driver to reject the request with the A-register = 1 (not ready).
- Read requests are rejected if the tape is at EOD. However, the EOD can be overwritten (write request) with data or a file mark unless the tape is at EOT.

Table 2-6. CTU Read/Write Request

Assembly Language	Where:
EXT EXEC . . JSB EXEC DEF *+5 DEF ICODE DEF ICNWD DEF IBUFL	ICODE = Request Code 1 = Read from CTU 2 = Write to CTU ICNWD = Control Word Bits 0 thru 5 = LU number of CTU Bits 6 thru 10 = Function code 01 = binary 00 = ASCII IBUFR = Address of first word of I/O buffer IBUFL = I/O Buffer length = n if specified as 16-bit words = -n if specified as 8-bit characters
FORTRAN	CALL EXEC (ICODE, ICNWD, IBUFR, IBUFL)

- Continuously moving the tape back and forth (e.g., re-reading) more than 100 times over a short section of the tape may permanently damage the tape cartridge. Periodically "conditioning" the tape prevents failures due to such back and forth motions. (Refer to "Tape Conditioning Procedure" in the appropriate manual.)

2-6. PRINTER CONTROL REQUEST

Table 2-7 shows the request formats for controlling any of the optional HP printers when they are interfaced to a 264X or 262X terminal. The control word (ICNWD) specifies printer LU and function code. Function code 11 octal advances printer paper the number of lines specified by the IPRM1 parameter if IPRM1 is positive. If IPRM1 is negative, the 9871A, 7310A, and 2631 advance to top-of-form. (The 9866A ignores a negative IPRM1.)

Table 2-7. Printer Control Request

Assembly Language	Where:
JSB EXEC DEF *+ 4 DEF ICODE DEF ICNWD DEF IPRM1	ICODE = Request Code 3 = Control Request ICNWD = Control Word = Bits 0 thru 5 = LU number of printer Bits 6 thru 10 = Function code 11 = Space IPRM1 (less than 256) lines IPRM1 = Number of printer space lines; or when negative: 2631/9871 goes to top-of-form; 9866 ignores request
FORTTRAN	CALL EXEC (3, ICNWD, IPRM1)

2-7. PRINTER LIST REQUEST

Table 2-8 shows the request formats for listing on a supported printer interfaced to a terminal. In effect, the drivers list directly to an optional printer from the user's write buffer. When preparing the buffer, note the following:

- The printer's maximum line length is 80 characters (9866, 7310A) or 132 characters (9871, 2631).
- The drivers supply the printer with a CR and LF as needed and terminate the request if the buffer contains a CR, LF, or RS.
- The drivers do not support the following features: Reverse Line Feed, Plotting.
- For any 9871A escape sequence which requires a parameter with a value of zero, use ASCII "@" (not a NULL) to send the zero.
- DVR05 and DVA05 do not support transparent mode listing to the printers.

Table 2-8. 264X Printer List Request

Assembly Language	<p>Where:</p> <p>ICODE = Request Code 2 = List on printer</p> <p>ICNWD = Control Word Bits 0 thru 5 = LU number of printer</p> <p>IBUFR = Address of first word of input/output buffer</p> <p>IBUFL = Input/output buffer length = n if specified as 16-bit words = -n if specified as 8-bit characters</p>
JSB EXEC DEF *+5 DEF ICODE DEF ICNWD DEF IBUFR DEF IBUFL	
FORTRAN	CALL EXEC (2, ICNWD, IBUFR, IBUFL)

2-8. STATUS REQUEST

Table 2-9 shows the request formats for obtaining the status of the most recent operation performed by the terminal or CTU. The driver returns the status to ISTA1 (word 5 of the device EQT) and, optionally, to ISTA2 (EQT4) and ISTA3 (LU status). (Refer to the RTE reference manuals for more detailed information.) Table 2-10 gives the meaning of EQT5 (ISTAT) bits when set to "1". For the cartridge tape unit (CTU), note the following:

- End-of-data (EOD): driver detected an EOD mark during read (or search) operation or has just recorded an EOD mark; driver positions the tape before the EOD mark. Recording operations may be executed to overwrite this mark with data records or a file mark unless the tape is at End-of-Tape (EOT) point.
- Write protected: the protect tab on the cartridge is set to prevent data recording.
- Last command aborted: the last command from the program or the terminal keyboard was not performed successfully; other status bits may give the cause of the failure.
- Hard read error: three successive read attempts failed to recover data from a record. Driver positions tape after the bad record. It is usually possible to retrieve the data by "conditioning" the tape and then making another read request; refer to "Tape Conditioning Procedures" in the terminal manual. If hard read errors occur frequently, clean the tape transport record heads. If the errors persist, the user should consider copying the taped data into a new tape cartridge.
- End-of-Tape (EOT): tape passed early warning mark on tape and driver recorded an EOD mark. Driver rejects commands directing forward motion of tape.
- Write error: a write request sent to the CTU cannot be executed.

Application Information

- Load point: tape is positioned at or before load point marker.
- End-of-File (EOF): driver detected file mark during read operation or has just recorded file mark.

Table 2-9. Status Request

Assembly Language	Where:
JSB EXEC DEF *+ 4 (or 5) DEF ICODE DEF ICNWD DEF ISTA1 DEF ISTA2 DEF ISTA3	ICODE = Request Code 13 = Status Request ICNWD = Control Word Bits 0 thru 5 = LU number of terminal or CTU ISTA1 = Word 5 of terminal or CTU EQT (refer to table 2-8 for details) ISTA2 = EQT word 4 (optional). Refer to RTE-II/RTE-III Manual for standard description. ISTA3 = LU status (optional). Refer to the RTE reference manuals for a standard description.
FORTRAN	CALL EXEC (13, ICNWD, ISTA1 [,ISTA2] [,ISTA3])

Table 2-10. EQT5 (ISTA1)

Bit Set	Cartridge Tape Unit (CTU)	Terminal	Printer
0	Cartridge not inserted or unit busy (2645) Cartridge not inserted (2644)		
1	End of data (EOD)	Terminal enabled	
2	Cartridge write protected		
3	Last command aborted; check other bits for cause	*Parity error	Last command aborted
4	Hard read error (2644) Hard read error or write error (2645) *Parity error	*Data set not ready	
5	End of tape (EOT)	Control D entered	
6	Tape at load point		
7	End of file (EOF)	Buffer flushed	

*These apply only to DVA05 over modem.

2-9. ADDITIONAL DVA05 CONTROL REQUESTS

The following three requests (see Sections 2-10, 2-11, and 2-12) allow modem support and are unique to DVA05 over modems (they are not applicable to hardwired DVA05).

Note that for modem operation the Terminal Initialization request must be issued first. Next, a Line Control request specifying line open is issued. At this time the communication channel between the remote user's data set and the system's data set should be established. When this connection is complete, the line control request completes. These two requests are issued only once, and thereafter the modem connection is transparent to the program and operator. (The requests do not need to be reissued for each program that makes an I/O request to the terminal.) If a line close request is issued and a new line open request is required, it is not necessary to issue a second Terminal Initialization request.

Before each transmission over a modem, the modem status lines "clear to send" (CB), "data carrier detector" (CF), and "data set ready" (CC) are checked. If they are not correct, the EQT will be downed with bit 4 set in the status word EQT5. When the line problem is fixed (CB, CF, and CC are set), an interrupt into DVA05 occurs, and the EQT is set up via a JMP \$UPIO.

When the transmission is complete, that data set is removed from the communication line by issuing a line close request. This request completes when the data set is no longer connected to the line.

2-10. TERMINAL INITIALIZATION

Table 2-11 shows the request formats for initializing a terminal when using modems. If a modem is used, a Terminal Initialization request must be complete before issuing any other request with DVA05. The initialization request sets up the transmission rate and the parity selection. The baud rate specified in the Terminal Initialization request must be the same as the baud rate that is set on the terminal.

Table 2-11. Terminal Initialization Request

Assembly Language	<p>Where:</p> <p>ICODE = Request Code 3 = Control Request</p> <p>ICNWD = Control Word Bits 0 thru 5 = LU Number of Terminal</p> <p>Bits 6 thru 10 = Function Code 30 = Terminal Initialization</p> <p>IPRM1 = Terminal Initialization Parameter *Bits 0 thru 3 = Baud Rate **Bit 4 = 0 = Odd Parity = 1 = Even Parity **Bit 5 = 0 = Parity "Off" = 1 = Parity "On" Bit 8 = Line Type = 0 = Hardwire = 1 = Modem</p>
<p>EXT EXEC . . JSB EXEC DEF *+4 DEF ICODE DEF ICNWD DEF IPRM1</p>	
FORTRAN	CALL EXEC (3,ICNWD,IPRM1)

Bit Field 0-3*Octal Value****Baud Rate**

0011	3	110
0110	6	300
1001	11	1200
1011	13	2400
1111	17	9600

**The parity function applies only to CRT/KEYD and ASCII CTU operations. Parity errors are detected and reported in the following four cases:

- If a parity error is detected in input character mode, DVA05 interprets it as though a RUBOUT occurred. A /,CRLF is sent to the CRT, and the line must be reentered.
- In input block mode, a parity error causes a zero to be posted in the transmission log (B-register). Also, bit 3 in the status word is set for the user to check.
- For a CTU ASCII read, a parity error causes the transmission log to be set to zero (however, the entire record is received). Also, bit 4 in the status word is set for the user to check.
- On output, a parity error is indicated by a ■ on the CRT.

It is the operator's responsibility to set the terminal parity to NONE, and to program no parity via a Terminal Initialization request for all binary operations.

2-11. LINE CONTROL REQUEST WITH MANUAL ANSWER

Before issuing the first read/write request with DVA05 over a modem, a Line Open (manual or auto answer) must be completed. Table 2-12 shows the request formats for issuing a Line Control request with Manual answer.

Manual Line Open results in the 12966 Interface Card setting the "request to send" (CA) and "data terminal ready" (CD) control lines. The line is then checked every two seconds for the "clear to send" (CB), "data carrier detector" (CF), and "data set ready" (CC) status lines. The request is completed upon detection of these three signals.

A Line Close request will clear "request to send" (CA) and "data terminal ready" (CD). Every two seconds thereafter, the status of the line is checked (for "clear to send" and "data carrier detector" clear).

Table 2-12. Line Control Request - Manual Answer

Assembly Language	Where:
<pre> EXT EXEC . . JSB EXEC DEF *+4 DEF ICODE DEF ICNWD DEF IPRM1 </pre>	<pre> ICODE = Request Code 3 = Control Request ICNWD = Control Word Bits 0 thru 5 = LU Number of Terminal Bits 6 thru 10 = Function Code 31 = Line Control-Manual IPRM1 = Line Selection = 0 = Line Close = non-zero = Line Open </pre>
FORTRAN	CALL EXEC (3,ICNWD,IPRM1)

2-12. LINE CONTROL REQUEST WITH AUTO ANSWER

This request can only be used with an auto answer modem that sets the Ring Indicator (CE) in response to answering a call. Table 2-13 shows the request formats for issuing a Line Control request with Auto answer.

DVA05 enables the Ring Interrupt on the I/O card. Upon interrupt, "request to send" (CA) and "data terminal ready" (CD) are set, and the line is checked every two seconds thereafter for "clear to send" (CB), "data carrier detector" (CF), and "data set ready" (CC). The request is completed upon detection of these three signals.

Table 2-13. Line Control Request - Auto Answer

Assembly Language	Where:
<pre> EXT EXEC . . JSB EXEC DEF *+3 DEF ICODE DEF ICNWD </pre>	<pre> Where: ICODE = Request Code 3 = Control Request ICNWD = Control Word Bits 0 thru 5 = LU Number of Terminal Bits 6 thru 10 = Function Code 32 = Line Control-Auto </pre>
FORTRAN	CALL EXEC (3,ICNWD)

2-13. EXAMPLE WITH MODEM OPERATION

For modem operation, the Terminal Initialization request must be issued first. An example of a Terminal Initialization is given below for the following specifications:

Baud rate — 1200

Parity on

Parity odd

Logical Unit 7

```

Then:  ICNWD = 3007B
       IPRM1 = 451B
       CALL EXEC(3,ICNWD,IPRM1) } Terminal Initialization

```

Next, a Line Control request for logical unit 7, specifying line open, is issued:

```

       ICNWD = 3107B
       IPRM1 = 1
       CALL EXEC(3,ICNWD,IPRM1) } Line Open with Manual Answer

```

When the transmission is complete, that data set is removed from the communication line by issuing a line close request for logical unit 7. When the data set is no longer connected to the link, this request completes.

```

       ICNWD = 3107B
       IPRM1 = 0
       CALL EXEC(3,ICNWD,IPRM1) } Line Close

```

The equivalent RTE File Manager commands for this example are:

```

:CN,7,30B,451B
:CN,7,31B,1
:CN,7,31B,0

```

Under RTE-IVB or later systems, you can use the CT command instead of CN.

2-14. PROTOCOL

The ENQ/ACK handshake protocol, described in this section, is used by DVR05 and DVA05 to prevent data overrun *at the terminal* at high transfer rates. The DC1/DC2 handshake is used to prevent data overrun *at the computer* at high transfer rates. The protocol uses the ASCII characters, DC1, DC2, ENQ, ACK, CR, LF, and RS. These characters have the decimal values 17, 18, 5, 6, 13, 10, and 30, respectively.

For a read from a device, the sequence is as follows:

The driver

1. Checks hardware lines OK?
2. Sends a DC1.
3. Receives message from device.
4. Receives CR or RS.
5. Sends CR/LF.
6. Sends ENQ, receives ACK.
7. Sends ENQ, receives ACK.

If the first character received at Step 3 is a DC2 (18 decimal), a second DC1 is sent and the card is configured for a block transfer. The terminating character (Step 4) will be one of CR or RS, depending if the terminal is line or page block mode, respectively.

For a normal ASCII writes to the device, the driver initiates one ENQ/ACK handshake after each 33-character transfer, and the operation is terminated by the driver with ENQ/ACK handshakes. The sequence is as follows:

1. Checks hardware lines OK?
2. Sends 33 characters of message.
3. Sends ENQ, receives ACK.
4. Continues 33-character transfers as in steps 2 and 3, until the transfer is complete.
5. Sends CR/LF.
6. Sends ENQ, receives ACK.
7. Sends ENQ, receives ACK.
8. Sends ENQ, receives ACK.

If the last character in the write buffer is an underscore ("_", octal 137), steps 5 and 6 will not be performed and the underscore will not be output.

For more information regarding terminal handshake protocols, refer to the manual for the terminal in question.

CONFIGURATION INFORMATION

SECTION

III

This section provides configuration information for Driver DVR05 and is intended to augment the data provided in the Real-Time Executive Software System Programming and Operating Manual or the RTE On-Line Generator Reference Manual.

The configuration requirements for generating DVA05 into an RTE system are the same as those necessary for configuring DVR05. If you are using hardwired DVA05, simply replace DVR05 with DVA05 in the following example. If you are using DVA05 over modems, the configuration will be the same, except that it is recommended that the terminal be unbuffered.

NOTE

There is no SIO driver for these terminals and HP 12966 hardware combinations; consequently, RTE-II/RTE-III system generators that require an SIO driver cannot use these combinations during system generation.

3-1. GENERATION PROCEDURE

Load the driver into the RTE System during system generation as described in the appropriate Real-Time Software Manual. During the system generation, take the following steps to configure the driver into the RTE system being generated.

3-2. PROGRAM INPUT PHASE

During the Program Input Phase, load Driver DVR05 along with other I/O drivers being loaded.

3-3. TABLE GENERATION PHASE

In the Table Generation Phase, make the following entries:

- a. An Equipment Table (EQT) entry for each terminal.

* EQUIPMENT TABLE ENTRY

EQT n?

sc,DVR05,B,T=32000,X=13

where: "n" is the EQT entry number, "sc" is the select code of the I/O card, "B" specifies the buffering option, "T" is the time out value for the device, and "X" indicates EQT extensions. For DVA05 over modems it is recommended that the buffering option not be specified. When a remote terminal is buffered, it is not possible to remove the current request from the system even if the remote terminal cannot process that request. When the terminal is unbuffered, the user can recover from an error because the incorrect request can be removed.

NOTE

Should the system display a file manager or RTE prompt when you are entering text from the terminal keyboard, the time out value is too small. Increase it. You should consider using a very large time out value (e.g., 32000) to prevent indefinite I/O suspension should the terminal not respond with an expected interrupt. Note also that the time out value refers only to the keyboard and input; DVR05 uses a time out value of 80 seconds for all cartridge tape and line printer operations and 3.8 seconds (or whatever was entered on the last control 34B request) for a display write.

Set "T" equal to at least 3000 (30 seconds) and set "X" equal to 13.

- b. A Device Reference Table (DRT) entry relating the desired logical unit number (LU) for each terminal device (e.g., cartridge tape unit) to the EQT entry.

* DEVICE REFERENCE TABLE

```
.  
. .  
lu=EQT #?  
n,m  
. .
```

where: "lu" is the LU number to be assigned to a terminal device, "n" is the EQT entry number of the terminal, and "m" is a subchannel number. For example, if the EQT entry for a 2640 Terminal is the eighth entry in the EQT table and you select 11 as the LU number for the terminal, then "8,0" is the correct response to:

```
11=EQT #?
```

In the above example, "0" specifies the terminal's keyboard-display as subchannel 0. Similarly, an HP 264X or 262X with optional printer requires four DRT entries; the following examples are commented (*) for explanatory purposes.

	*DEVICE	*REQUIRED *SUBCHANNEL
.		
.		
.		
11=EQT #?		
8,0	*KEYBOARD-DISPLAY LU (Non-graphics)	0
12=EQT #?		
8,3	*KEYBOARD-DISPLAY LU (Graphics mode — 2648)	3
13=EQT #?		
8,1	*LEFT CARTRIDGE TAPE UNIT LU	1
14=EQT #?		
8,2	*RIGHT CARTRIDGE TAPE UNIT LU	2
15=EQT #?		
8,4	*OPTIONAL PRINTER LU	4
.		
.		

Note that the 264X keyboard-display must have the lowest of the three (or four) LU numbers; however, it is not necessary that the LU numbers be consecutive as shown above. If the terminal is to be the system console, its keyboard-display must be LU 1.

- c. An Interrupt Table entry for each terminal I/O card.

*** INTERRUPT TABLE**

```

.
.
sc,PRG,PRMPT
.
.
```

where: "sc" is the select code of the I/O card, "PRG" indicates that a program is assigned to the associated terminal, and "PRMPT" is the name of the program (supplied with the operating system). Note that a user-written program may be substituted for program PRMPT, or the interrupt may point directly to the EQT entry (refer to the RTE manuals for details.)

READER COMMENT SHEET

RTE DRIVERS DVR05/DVA05
For HP 263X/264X Terminals

92001-90015

October 1983

Update No. _____

(If Applicable)

We welcome your evaluation of this manual. Your comments and suggestions help us improve our publications.
Please use additional pages if necessary.

FROM:

Name _____

Company _____

Address _____

FOLD

FOLD




NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 141 CUPERTINO, CA.

— POSTAGE WILL BE PAID BY —

Hewlett-Packard Company
Data Systems Division
11000 Wolfe Road
Cupertino, California 95014
ATTN: Technical Publications

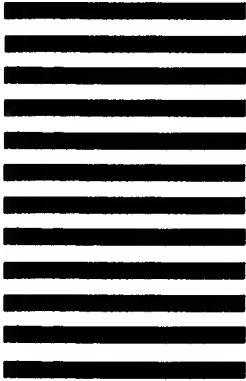

FOLD

FOLD

Product Line Sales/Support Key

Key Product Line

- A Analytical
- CM Components
- C Computer Systems Sales only
- CH Computer Systems Hardware Sales and Services
- CS Computer Systems Software Sales and Services
- E Electronic Instruments & Measurement Systems
- M Medical Products
- MP Medical Products Primary SRO
- MS Medical Products Secondary SRO
- P Personal Computation Products
- * Sales only for specific product line
- ** Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneva

ASIA

Hewlett-Packard Asia Ltd.
6th Floor, Sun Hung Kai Centre
30 Harbour Rd.
G.P.O. Box 795

HONG KONG

Tel: 5-832 3211
After Jan. 1, 1984
47th Floor, China Resources Bldg.
26 Harbour Rd., Wanchai
HONG KONG
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
Telex: 610-492-4246

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
Lieblgasse 1
P.O.Box 72
A-1222 VIENNA, Austria
Tel: (222) 2365110
Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
Uilenstede 475
P.O.Box 999
NL-1180 AZ AMSTELVEEN
The Netherlands
Tel: 20 437771

SOUTH EAST EUROPE

Hewlett-Packard S.A.
7, Rue du Bois-du-Lan
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 12 12
Telex: 27835 hpse
Cable: HEWPACKSA Geneva

OTHER EUROPE

Hewlett-Packard S.A.
P.O. Box
150, Rte du Nant-D'Avril
CH-1217 MEYRIN 2, Switzerland
Tel: (022) 83 8111
Telex: 22486 hpsa
Cable: HEWPACKSA Geneva

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
Mediterranean and Middle East
Operations
Atrina Centre
32 Kifissias Ave.
Paradissos-Amarousion, ATHENS
Greece
Tel: 682 88 11
Telex: 21-6588 HPAT GR
Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
4 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
3939 Lankershim Blvd.
P.O. Box 3919
LOS ANGELES, CA 91604
Tel: (213) 506-3700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
Intercontinental Headquarters
3495 Deer Creek Road
PALO ALTO, CA 94304
Tel: (415) 857-1501
Telex: 034-8300
Cable: HEWPACK

ANGOLA

Telectra
Empresa Técnica de Equipamentos
R. Barbosa Rodrigues, 41-I DT.
Caixa Postal 6487
LUANDA
Tel: 35515,35516
E.P

ARGENTINA

Hewlett-Packard Argentina S.A.
Avenida Santa Fe 2035
Martinez 1640 BUENOS AIRES
Tel: 798-5735, 792-1293
Telex: 17595 BIONAR
Cable: HEWPACKARG
A,E,CH,CS,P
Biotron S.A.C.I.M. e I.
Av Paseo Colon 221, Piso 9
1399 BUENOS AIRES
Tel: 30-4846, 30-1851
Telex: 17595 BIONAR
M

AUSTRALIA

Adelaide, South Australia Office

Hewlett-Packard Australia Ltd.
153 Greenhill Road
PARKSIDE, S.A. 5063
Tel: 272-5911
Telex: 82536
Cable: HEWPAARD Adelaide
A*,CH,CM,,E,MS,P

Brisbane, Queensland Office

Hewlett-Packard Australia Ltd.
10 Payne Road
THE GAP, Queensland 4061
Tel: 30-4133
Telex: 42133
Cable: HEWPAARD Brisbane
A,CH,CM,E,M,P

Canberra, Australia

Capital Territory Office
Hewlett-Packard Australia Ltd.
121 Wollongong Street
Fyshwick, A.C.T. 2609
Tel: 80 4244
Telex: 62650
Cable: HEWPAARD Canberra
CH,CM,E,P

Melbourne, Victoria Office

Hewlett-Packard Australia Ltd.
31-41 Joseph Street
BLACKBURN, Victoria 3130
Tel: 895-2895
Telex: 31-024
Cable: HEWPAARD Melbourne
A,CH,CM,CS,E,MS,P

Perth, Western Australia Office

Hewlett-Packard Australia Ltd.
261 Stirling Highway
CLAREMONT, W.A. 6010
Tel: 383-2188
Telex: 93859
Cable: HEWPAARD Perth
A,CH,CM,E,MS,P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
17-23 Talavera Road
P.O. Box 308
NORTH RYDE, N.S.W. 2113
Tel: 887-1611
Telex: 21561
Cable: HEWPAARD Sydney
A,CH,CM,CS,E,MS,P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
Grottenhofstrasse 94
A-8052 GRAZ
Tel: (0316) 291 5 66
Telex: 32375
CH,E
Hewlett-Packard Ges.m.b.h.
Lieblgasse 1
P.O. Box 72
A-1222 VIENNA
Tel: (0222) 23 65 11-0
Telex: 134425 HEPA A
A,CH,CM,CS,E,MS,P

BAHRAIN

Green Salon
P.O. Box 557
Manama
BAHRAIN
Tel: 255503-255950
Telex: 84419
P

Wael Pharmacy

P.O. Box 648
BAHRAIN
Tel: 256123
Telex: 8550 WAEI BN
E,C,M

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedel
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
Alameda Rio Negro, 750
Alphaville
06400 BARUERI SP
Tel: (011) 421.1311
Telex: (011) 33872 HPBR-BR
Cable: HEWPACK Sao Paulo
A,CH,CM,CS,E,M,P
Hewlett-Packard do Brasil I.e.C. Ltda.
Avenida Epitacio Pessoa, 4664
22471 RIO DE JANEIRO-RJ
Tel: (021) 286.0237
Telex: 021-21905 HPBR-BR
Cable: HEWPACK Rio de Janeiro
A,CH,CM,E,MS,P*
ANAMED I.C.E.I. Ltda.
Rua Bage, 103
04012 SAO PAULO
Tel: (011) 570-5726
Telex: 021-21905 HPBR-BR
M



SALES & SUPPORT OFFICES

Arranged alphabetically by country

CANADA

Alberta

Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (403) 235-3100
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
11120A-178th Street
EDMONTON, Alberta T5S 1P2
Tel: (403) 486-6666
A,CH,CM,CS,E,MS,P

British Columbia

Hewlett-Packard (Canada) Ltd.
10691 Shellbridge Way
RICHMOND,
British Columbia V6X 2W7
Tel: (604) 270-2277
Telex: 610-922-5059
A,CH,CM,CS,E*,MS,P*

Manitoba

Hewlett-Packard (Canada) Ltd.
380-550 Century Street
WINNIPEG, Manitoba R3H 0Y1
Tel: (204) 786-6701
A,CH,CM,E,MS,P*

Nova Scotia

Hewlett-Packard (Canada) Ltd.
P.O. Box 931
900 Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 469-7820
CH,CM,CS,E*,MS,P*

Ontario

Hewlett-Packard (Canada) Ltd.
3325 N. Service Rd., Unit 6
BURLINGTON, Ontario P3A 2A3
Tel: (416) 335-8644
CS,M*

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-9430
A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-6483
A,CH,CM,CS,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
220 Yorkland Blvd., Unit #11
WILLOWDALE, Ontario M2J 1R5
Tel: (416) 499-9333
CH

Quebec

Hewlett-Packard (Canada) Ltd.
17500 South Service Road
Trans-Canada Highway
KIRKLAND, Quebec H9J 2M5
Tel: (514) 697-4232
A,CH,CM,CS,E,MP,P*

Hewlett-Packard (Canada) Ltd.
Las Galarías du Vallon
2323 Du Varson Nord
STE. FOY, Quebec G1N 4C2
Tel: (418) 687-4570
CH

CHILE

Jorge Calcagni y Cia. Ltda.
Av. Italia 634 Santiago
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: Public Booth 440001
A,CM,E,M

Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: (02) 22 55 044
Telex: 240-565 OLYMP CL
Cable: Olympiachile Santiagochile
CH,CS,P

CHINA, People's Republic of

China Hewlett-Packard Rep. Office
P.O. Box 418
1A Lane 2, Luchang St.
Beiwei Rd., Xuanwu District
BEIJING
Tel: 33-1947, 33-7426
Telex: 22601 CTSHP CN
Cable: 1920
A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langabaak & Kiar S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M
Casa Humboldt Ltda.
Carrera 14, No. 98-60
Apartado Aereo 51283
BOGOTA 1, O.E.
Tel: 256-1686
Telex: 45403 CCAL CO.
A

COSTA RICA

Científica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGUR CR
CM,E,M

CYPRUS

Telerexa Ltd.
P.O. Box 4809
14C Stassinos Avenue
NICOSIA
Tel: 62698
Telex: 2894 LEVIOO CY
E,M,P

DENMARK

Hewlett-Packard A/S
Datavaj 52
DK-3460 BIRKEROD
Tel: (02) 81-66-40
Telex: 37409 hpas dk
A,CH,CM,CS,E,MS,P

Hewlett-Packard A/S
Rollghadsvaj 32
OK-8240 RISSKOV, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpas dk
CH,E

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA) P

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE EO
CM,E,P

Hospitalar S.A.
Robles 625
Casilla 3590
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTL EO
Cable: HOSPITALAR-Quito
M

EGYPT

International Engineering Associates
24 Hussein Hegazi Street
Kasr-al-Aini
CAIRO
Tel: 23829, 21641
Telex: IEA UN 93830
CH,CS,E,M

EGYPTOR
P.O.Box 2558
42 El Zahraa Street
CAIRO, Egypt
Tel: 65 00 21
Telex: 93 337
P

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1216
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 IPESASAL
A,CH,CM,CS,E,P

FINLAND

Hewlett-Packard Oy
Revontulentie 7
PL 24
SF-02101 ESPOO 10
Tel: (90) 4550211
Telex: 121563 hewpa sf
CH,CM,CS,P

Hewlett-Packard Oy
(Olarinluoma 7)
PL 24
02101 ESPOO 10
Tel: (90) 4521022
A,E,MS

Hewlett-Packard Oy
Aaloksenkatu 10-C
SF-40720-72 JYVASKYLA
Tel: (941) 216318
CH

Hewlett-Packard Oy
Kainvuntia 1-C
SF-90140-14 OULU
Tel: (981) 338785
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13763 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 16 (42) 59-41-02
Telex: 410770F
A,CH,E,MS,P*

Hewlett-Packard France
64, rue Marchand Saillant
F-61000 ALENCON
Tel: 16 (33) 29 04 42

Hewlett-Packard France
Boite Postale 503
F-25026 BESANCON
28 rue de la Republique
F-25000 BESANCON
Tel: 16 (81) 83-16-22
CH,M

Hewlett-Packard France
13, Place Napoleon III
F-29000 BREST
Tel: 16 (98) 03-38-35

Hewlett-Packard France
Chemln des Mouillas
Boite Postale 162
F-89130 ECULLY Cadax (Lyon)
Tel: 16 (78) 833-81-25
Telex: 310617F
A,CH,CS,E,MP

Hewlett-Packard France
Tour Lorraine
Boulevard de France
F-91035 EVRY Cedax
Tel: 16 6 077-96-80
Telex: 692315F
E

Hewlett-Packard France
Parc d'Activite du Bois Briard
Ave. du Lac
F-91040 EVRY Cedex
Tel: 16 6 077-8383
Telex: 692315F
E

Hewlett-Packard France
5, avenue Raymond Chanas
F-38320 EYBENS (Grenoble)
Tel: 16 (76) 25-81-41
Telex: 980124 HP GRENOB EYBE
CH

Hewlett-Packard France
Centre d'Affaire Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 300
F-93153 LE BLANC MESSIL
Tel: 16 (1) 865-44-52
Telex: 211032F
CH,CS,E,MS

Hewlett-Packard France
Parc d'Activités Cadere
Quartier Jean Mermoz
Avenue du Président JF Kennady
F-33700 MERIGNAC (Bordeaux)
Tel: 16 (56) 34-00-84
Telex: 550105F
CH,E,MS

Hewlett-Packard France
Immuabla "Las 3 B"
Nouveau Chamin de la Garde
ZAC de Bols Briard
F-44065 NANTES Cedex
Tel: 16 (40) 50-32-22
CH**



FRANCE (Cont'd)

Hewlett-Packard France
125, rue du Faubourg Bannier
F-45000 ORLEANS
Tel: 16 (38) 68 01 63

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P

Hewlett-Packard France
Paris Porte-Maillot
15, Avenue de L'Amiral Bruix
F-75782 PARIS CEDEX 16
Tel: 16 (1) 502-12-20
Telex: 613663F
CH,MS,P

Hewlett-Packard France
124, Boulevard Tourasse
F-64000 PAU
Tel: 16 (59) 80 38 02

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 RENNES
Tel: 16 (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*

Hewlett-Packard France
98 Avenue de Bretagne
F-76100 ROUEN
Tel: 16 (35) 63-57-66
CH*,*,CS

Hewlett-Packard France
4 Rue Thomas Mann
Boite Postale 56
F-67033 STRASBOURG Cedex
Tel: 16 (88) 28-56-46
Telex: 890141F
CH,E,MS,P*

Hewlett-Packard France
Le Péripole
20, Chemin du Pigeonnier de la
Cépière
F-31083 TOULOUSE Cedex
Tel: 16 (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*

Hewlett-Packard France
9, rue Baudin
F-26000 VALENCE
Tel: 16 (75) 42 76 16

Hewlett-Packard France
Carolor
ZAC de Bois Briand
F-57640 VIGY (Metz)
Tel: 16 (8) 771 20 22
CH

Hewlett-Packard France
Immeuble Péricentre
F-59658 VILLENEUVE D'ASCQ Cedex
Tel: 16 (20) 91-41-25
Telex: 160124F
CH,E,MS,P*

**GERMAN FEDERAL
REPUBLIC**
Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
0-1000 BERLIN 30
Tel: (030) 24-90-86
Telex: 018 3405 hpbld d
A,CH,E,M,P

Hewlett-Packard GmbH
Geschäftsstelle
Herrenberger Strasse 130
0-7030 BOBLINGEN
Tel: (7031) 14-0
Telex:
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Leutze-Strasse 1
0-4000 DUSSELDORF
Tel: (0211) 5971-1
Telex: 085/86 533 hpdd d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
0-4600 DORTMUND-Aplerbeck
Tel: (0231) 45001

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
0-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpfm d
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Aussenstelle Bad Homburg
Louisenstrasse 115
0-6380 BAD HOMBURG
Tel: (06172) 109-0

Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
0-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
0-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259
A,CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Rossauer Weg 2-4
0-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
0-7910 NEU ULM
Tel: 0731-70241
Telex: 0712816 HP ULM-0
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Ehhericherstr. 13
0-8500 NÜRNBERG 10
Tel: (0911) 5205-0
Telex: 0623 860
CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
0-8028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

See United Kingdom

GREECE

Kostas Karayannis S.A.
8 Omirou Street
ATHENS 133
Tel: 32 30 303, 32 37 371
Telex: 215962 RKAR GR
A,CH,CM,CS,E,M,P

PLAISIO S.A.
G. Gerardos
24 Stournara Street
ATHENS
Tel: 36-11-160
Telex: 221871
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 4192 TELTRO GU
A,CH,CM,CS,E,M,P

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road

HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPACK HONG KONG
E,CH,CS,P

CET Ltd.
1402 Tung Wah Mansion
199-203 Hennessy Rd.
Wanchia, HONG KONG
Tel: 5-729376
Telex: 85148 CET HX
CM

Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Cornuaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
A,M

ICELAND

Elding Trading Company Inc.
Hafnarvölli-Tryggvagotu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs and
maintenance service is done through
Computer Maintenance Corp.

Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660
Telex: 0845-430
Cable: BLUESTAR
A,CH*,CM,CS*,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
A,M

Blue Star Ltd.
Sahas
414/2 Vir Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTBLUE
A,CH*,CM,CS*,E,M

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Alkapuri, BORODA, 390 005
Tel: 65235
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
A,M

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82057
Telex: 041-379
Cable: BLUESTAR
A,M

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH*,CM,CS*,E,M

Blue Star Ltd.
15/16-C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poornima
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

Computer Maintenance Corporation
Ltd.
115, Sarojini Devi Road
SECUNDERABAD 500 003
Tel: 310-184, 345-774
Telex: 031-2960
CH**

SALES & SUPPORT OFFICES

Arranged alphabetically by country

INDONESIA

BERCA Indonesia P.T.
P.O.Box 496/Jkt.
Jl. Abdul Muis 62
JAKARTA
Tel: 21-373009
Telex: 46748 BERSAL IA
Cable: BERSAL JAKARTA P
BERCA Indonesia P.T.
P.O.Box 2497/Jkt
Anlara Bldg., 17th Floor
Jl. Medan Merdeka Selatan 17
JAKARTA-PUSAT
Tel: 21-344-181
Telex: BERSAL IA
A,CS,E,M
BERCA Indonesia P.T.
P.O. Box 174/SBY.
Jl. Kutei No. 11
SURABAYA
Tel: 68172
Telex: 31146 BERSAL SB
Cable: BERSAL-SURABAYA
A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.
Service Operation
Al Mansoor City 9B/3/7
BAGHDAD
Tel: 551-49-73
Telex: 212-455 HEPAIRAQ IK
CH,CS

IRELAND

Hewlett-Packard Ireland Ltd.
82/83 Lower Leeson Street
DUBLIN 2
Tel: 0001 608800
Telex: 30439
A,CH,CM,CS,E,M,P
Cardiac Services Ltd.
Kilmore Road
Artane
DUBLIN 5
Tel: (01) 351820
Telex: 30439
M

ISRAEL

Eldan Electronic Instrument Ltd.
P.O.Box 1270
JERUSALEM 91000
16, Ohaiav St.
JERUSALEM 94467
Tel: 533 221, 553 242
Telex: 25231 AB/PAKRD IL
A
Electronics Engineering Division
Motorola Israel Ltd.
16 Kremenetski Street
P.O. Box 25016
TEL-AVIV 67899
Tel: 3 88 388
Telex: 33569 Motil IL
Cable: BASTEL Tel-Aviv
CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A.
Traversa 99C
Via Giulio Petroni, 19
I-70124 **BARI**
Tel: (080) 41-07-44
M

Hewlett-Packard Italiana S.p.A.
Via Martin Luther King, 38/III
I-40132 **BOLOGNA**
Tel: (051) 402394
Telex: 511630
CH,E,MS
Hewlett-Packard Italiana S.p.A.
Via Principe Nicola 43G/C
I-95126 **CATANIA**
Tel: (095) 37-10-87
Telex: 970291
C,P
Hewlett-Packard Italiana S.p.A.
Via G. Di Vittorio 9
I-20063 **CERNUSCO SUL NAVIGLIO**
(Milano)
Tel: (02) 923691
Telex: 334632
A,CH,CM,CS,E,MP,P
Hewlett-Packard Italiana S.p.A.
Via C. Colombo 49
I-20090 **TREZZANO SUL NAVIGLIO**
(Milano)
Tel: (02) 4459041
Telex: 322116
C,M
Hewlett-Packard Italiana S.p.A.
Via Nuova San Rocco a
Capodimonte, 62/A
I-80131 **NAPOLI**
Tel: (081) 7413544
Telex: 710698
A,CH,E
Hewlett-Packard Italiana S.p.A.
Viale G. Modugno 33
I-16156 **GENOVA PEGLI**
Tel: (010) 68-37-07
Telex: 215238
E,C
Hewlett-Packard Italiana S.p.A.
Via Pelizzo 15
I-35128 **PADOVA**
Tel: (049) 664888
Telex: 430315
A,CH,E,MS
Hewlett-Packard Italiana S.p.A.
Viale C. Pavese 340
I-00144 **ROMA EUR**
Tel: (06) 54831
Telex: 610514
A,CH,CM,CS,E,MS,P*
Hewlett-Packard Italiana S.p.A.
Via di Casellina 57/C
I-50018 **SCANDICCI-FIRENZE**
Tel: (055) 753863
Hewlett-Packard Italiana S.p.A.
Corso Svizzera, 185
I-10144 **TORINO**
Tel: (011) 74 4044
Telex: 221079
CH,E
JAPAN
Yokogawa-Hewlett-Packard Ltd.
152-1, Onna
ATSUGI, Kanagawa, 243
Tel: (0462) 28-0451
CM,C*,E
Yokogawa-Hewlett-Packard Ltd.
Meiji-Seimei Bldg. 6F
3-1 Hon Chiba-Cho
CHIBA, 280
Tel: 472 25 7701
E,CH,CS

Yokogawa-Hewlett-Packard Ltd.
Yasuda-Seimei Hiroshima Bldg.
6-11, Hon-dori, Naka-ku
HIROSHIMA, 730
Tel: 82-241-0611
Yokogawa-Hewlett-Packard Ltd.
Towa Building
2-3, Kaigan-dori, 2 Chome Chuo-ku
KOBE, 650
Tel: (078) 392-4791
C,E
Yokogawa-Hewlett-Packard Ltd.
Kumagaya Asahi 82 Bldg
3-4 Tsukuba
KUMAGAYA, Saitama 360
Tel: (0485) 24-6563
CH,CM,E
Yokogawa-Hewlett-Packard Ltd.
Asahi Shinbun Daiichi Seimei Bldg.
4-7, Hanabata-cho
KUMAMOTO, 860
Tel: (0963) 54-7311
CH,E
Yokogawa-Hewlett-Packard Ltd.
Shin-Kyoto Center Bldg.
614, Higashi-Shiokoji-cho
Karasuma-Nishiiru
Shiokoji-dori, Shimogyo-ku
KYOTO, 600
Tel: 075-343-0921
CH,E
Yokogawa-Hewlett-Packard Ltd.
Mito Mitsui Bldg
4-73, Sanno-maru, 1 Chome
MITO, Ibaraki 310
Tel: (0292) 25-7470
CH,CM,E
Yokogawa-Hewlett-Packard Ltd.
Sumitomo Seimei 14-9 Bldg.
Meieki-Minami, 2 Chome
Nakamura-ku
NAGOYA, 450
Tel: (052) 571-5171
CH,CM,CS,E,MS
Yokogawa-Hewlett-Packard Ltd.
Chuo Bldg.,
4-20 Nishinakajima, 5 Chome
Yodogawa-ku
OSAKA, 532
Tel: (06) 304-6021
Telex: YHPOSA 523-3624
A,CH,CM,CS,E,MP,P*
Yokogawa-Hewlett-Packard Ltd.
27-15, Yabe, 1 Chome
SAGAMIHARA Kanagawa, 229
Tel: 0427 59-1311
Yokogawa-Hewlett-Packard Ltd.
Oaichi Seimei Bldg.
7-1, Nishi Shinjuku, 2 Chome
Shinjuku-ku, **TOKYO 160**
Tel: 03-348-4611
CH,E
Yokogawa-Hewlett-Packard Ltd.
29-21 Takaido-Higashi, 3 Chome
Suginami-ku **TOKYO 168**
Tel: (03) 331-6111
Telex: 232-2024 YHPTOK
A,CH,CM,CS,E,MP,P*
Yokogawa-Hewlett-Packard Ltd.
Oaichi Asano Building
2-8, Odori, 5 Chome
UTSUNOMIYA, Tochigi 320
Tel: (0286) 25-7155
CH,CS,E

Yokogawa-Hewlett-Packard Ltd.
Yasuda Seimei Nishiguchi Bldg.
30-4 Tsuruya-cho, 3 Chome
YOKOHAMA 221
Tel: (045) 312-1252
CH,CM,E

JORDAN

Mouasher Cousins Company
P.O. Box 1387
AMMAN
Tel: 24907, 39907
Telex: 21456 SABCO JO
CH,E,M,P

KENYA

ADCOM Ltd., Inc., Kenya
P.O.Box 30070
NAIROBI
Tel: 331955
Telex: 22639
E,M

KOREA

Samsung Electronics HP Division
12 Fl. Kihnam Bldg.
San 75-31, Yeoksam-Dong
Kangnam-Ku
Yeongdong P.O. Box 72
SEOUL
Tel: 555-7555, 555-5447
Telex: K27364 SAMSAN
A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaldiya Trading & Contracting
P.O. Box 830 Safat
KUWAIT
Tel: 42-4910, 41-1726
Telex: 22481 Areeg kt
CH,E,M
Photo & Cine Equipment
P.O. Box 270 Safat
KUWAIT
Tel: 42-2846, 42-3801
Telex: 22247 Matin kt
P

LEBANON

G.M. Dolmadjian
Achralfieh
P.O. Box 165.167
BEIRUT
Tel: 290293
MP**
Computer Information Systems
P.O. Box 11-6274
BEIRUT
Tel: 89 40 73
Telex: 22259
C

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.
Blvd de la Woluwe, 100
Woluwedel
B-1200 BRUSSELS
Tel: (02) 762-32-00
Telex: 23-494 paloben bru
A,CH,CM,CS,E,MP,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)
Sdn. Bhd.
1st Floor, Bangunan British
American
Jalan Semantan, Damansara Heights
KUALA LUMPUR 23-03
Tel: 943022
Telex: MA31011
A,CH,E,M,P*



MAYLAISIA (Cont'd)

Protel Engineering
P.O.Box 1917
Lot 6624, Section 64
23/4 Pending Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROMAL
Cable: PROTELENG
A,E,M

MALTA

Philip Toledo Ltd.
Notabile Rd.
MRICHEL
Tel: 447 47, 455 66
Telex: Media MW 649
E,P

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
16020 MEXICO D.F.
Tel: 6-76-46-00
Telex: 17-74-507 HEWPACK MEX
A,CH,CS,E,MS,P
Hewlett-Packard Mexicana, S.A.
de C.V.
Ave. Colonia del Valle 409
Col. del Valle
Municipio de Garza Garcia
MONTERREY, Nuevo Leon
Tel: 78 42 41
Telex: 038 410
CH
ECISA
José Vasconcelos No. 218
Col. Condesa Deleg. Cuauhtémoc
MEXICO D.F. 06140
Tel: 553-1206
Telex: 17-72755 ECE ME
M

MOROCCO

Dolbeau
81 rue Karatchi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E

Gerep

2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KK AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 47-20-21
Telex: 13 216 HEPA NL
A,CH,CM,CS,E,MP,P
Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906VK CAPELLE A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE A/D IJSSEL
Tel: (10) 51-64-44
Telex: 21261 HEPAC NL
A,CH,CS,E

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
NL 5612 LV EINDHOVEN
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: (040) 326911
Telex: 51484 hepae nl
A,CH*,E,M

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPACK Auckland
CH,CM,E,P*
Hewlett-Packard (N.Z.) Ltd.
4-12 Cruickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 9443
Courtenay Place, WELLINGTON 3
Tel: 877-199
Cable: HEWPACK Wellington
CH,CM,E,P

Northrop Instruments & Systems Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 794-091
Telex: 60605
A,M

Northrop Instruments & Systems Ltd.
110 Mandeville St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-928
Telex: 4203
A,M

Northrop Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A,M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 FYLLINGSDALEN (Bergen)
Tel: 004715/16 55 40
Telex: 16621 hpnas n
CH,CS,E,MS

Hewlett-Packard Norge A/S
Østerdalen 16-18
P.O. Box 34
N-1345 ØSTERÅS
Tel: 004712/17 11 80
Telex: 16621 hpnas n
A,CH,CM,CS,E,M,P

OMAN

Khimjil Ramdas
P.O. Box 19
MUSCAT
Tel: 722225, 745601
Telex: 3289 BROKER MB MUSCAT
P
Suhail & Saud Bahwan
P.O.Box 169
MUSCAT
Tel: 734 201-3
Telex: 3274 BAHWAN MB

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 51071
Cable: FEMUS Rawalpindi
A,E,M
Mushko & Company Ltd.
Oosman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSKO PK
Cable: COOPERATOR Karachi
A,E,M,P*

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4929
PANAMA 5
Tel: 63-6613, 63-6748
Telex: 3483 ELECTRON PG
A,CM,E,M,P

PERU

Cia Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
CM,E,M,P

PHILIPPINES

The Online Advanced Systems Corporation
Rico House, Amorsolo Cor. Herrera Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A,CH,CS,E,M
Electronic Specialists and Proponents Inc.
690-B Epifanio de los Santos Avenue
Cubao, QUEZON CITY
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY BOOTH
P

PORTUGAL

Mundinter
Intercambio Mundial de Comércio
S.A.R.L.
P.O. Box 2761
Av. Antonio Augusto de Aguiar 138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M
Soquímica
Av. da Liberdade, 220-2
1298 LISBOA Codex
Tel: 56 21 81/2/3
Telex: 13316 SABASA
P

Telectra-Empresa Técnica de Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo da Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P

PUERTO RICO

Hewlett-Packard Puerto Rico
Ave. Muñoz Rivera #101
Esq. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800
Hewlett-Packard Puerto Rico
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00628
Tel: (809) 762-7255
A,CH,CS

QATAR

Computearbia
P.O. Box 2750
DOHA
Tel: 883555
Telex: 4806 CHPARB
P
Eastern Technical Services
P.O.Box 4747
DOHA
Tel: 329 993
Telex: 4156 EASTEC DH
Nasser Trading & Contracting
P.O.Box 1563
DOHA
Tel: 22170, 23539
Telex: 4439 NASSER DH
M

SAUDI ARABIA

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 22015
Thuobah
AL-KHOBAR
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 1228
Redec Plaza, 6th Floor
JEDDAH
Tel: 644 38 48
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O.Box 22015
RIYADH
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYD SJ
CH,CS,E,M
Abdul Ghani El Ajou
P.O. Box 78
RIYADH
Tel: 40 41 717
Telex: 200 932 EL AJOU
P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
#08-00 Inchcape House
450-2 Alexandra Road
P.O. Box 58 Alexandra Rd. Post Office
SINGAPORE, 9115
Tel: 631788
Telex: HPSGSO RS 34209
Cable: HEWPACK, Singapore
A,CH,CS,E,MS,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

SINGAPORE (Cont'd)

Dynamar International Ltd.
Unit 05-11 Block 6
Kolam Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS 26283
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 120
Howard Place **CAPE PROVINCE 7450**
Pine Park Center, Forest Drive,
Pinelands

CAPE PROVINCE 7405

Tel: 53-7954
Telex: 57-20006
A,CH,CM,E,MS,P

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 37099
92 Overport Drive
DURBAN 4067
Tel: 28-4178, 28-4179, 28-4110
Telex: 6-22954
CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.
6 Linton Arcade
511 Cape Road
Linton Grange
PORT ELIZABETH 6000
Tel: 041-302148
CH

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 33345
Glenstantia 0010 **TRANSVAAL**
1st Floor East
Constantia Park Ridge Shopping
Centre
Constantia Park
PRETORIA
Tel: 982043
Telex: 32163
CH,E

Hewlett-Packard So Africa (Pty.) Ltd.
Private Bag Wendywood
SANDTON 2144
Tel: 802-5111, 802-5125
Telex: 4-20877
Cable: HEWPACK Johannesburg
A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.
Calle Entenza, 321
E-BARCELONA 29
Tel: 322.24.51, 321.73.54
Telex: 52603 hpbee
A,CH,CS,E,MS,P

Hewlett-Packard Española S.A.
Calle San Vicente S/No
Edificio Albia II
E-BILBAO 1
Tel: 423.83.06
A,CH,E,MS

Hewlett-Packard Española S.A.
Ctra. de la Coruña, Km. 16, 400
Las Rozas
E-MADRID
Tel: (1) 637.00.11
CH,CS,M

Hewlett-Packard Española S.A.
Avda. S. Francisco Javier, S/no
Planta 10. Edificio Sevilla 2,
E-SEVILLA 5
Tel: 64.44.54
Telex: 72933
A,CS,MS,P

Hewlett-Packard Española S.A.
Calle Ramon Gordillo, 1 (Entlo.3)
E-VALENCIA 10
Tel: 361-1354
CH,P

SWEDEN

Hewlett-Packard Sverige AB
Sunnanvagen 14K
S-22226 **LUND**
Tel: (046) 13-69-79
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Östra Tullgatan 3
S-21128 **MALMÖ**
Tel: (040) 70270
Telex: (854) 17886 (via Spånga
office)

Hewlett-Packard Sverige AB
Västra Vintergatan 9
S-70344 **ÖREBRO**
Tel: (19) 10-48-80
Telex: (854) 17886 (via Spånga
office)
CH

Hewlett-Packard Sverige AB
Skalholtsgatan 9, Kista
Box 19
S-16393 **SPÅNGA**
Tel: (08) 750-2000
Telex: (854) 17886
Telefax: (08) 7527781
A,CH,CM,CS,E,MS,P
Hewlett-Packard Sverige AB
Frötällisgatan 30
S-42132 **VÄSTRA-FRÖLUNDA**
Tel: (031) 49-09-50
Telex: (854) 17886 (via Spånga
office)
CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Clarastrasse 12
CH-4058 BASEL
Tel: (61) 33-59-20
A

Hewlett-Packard (Schweiz) AG
7, rue du Bois-du-Lan
Case Postale 365
CH-1217 MEYRIN 2
Tel: (0041) 22-83-11-11
Telex: 27333 HPAG CH
CH,CM,CS

Hewlett-Packard (Schweiz) AG
Allmend 2
CH-8967 WIDEN
Tel: (0041) 57 31 21 11
Telex: 53933 hpag ch
Cable: HPAG CH
A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.
Nuri Basha Ahnaf Ebn Kays Street
P.O. Box 5781
DAMASCUS
Tel: 33-24-87
Telex: 411 215
Cable: ELECTROBOR DAMASCUS
E

Middle East Electronics
P.O. Box 2308
Abu Rummaneh
DAMASCUS
Tel: 33 4 5 92
Telex: 411 304
M

TAIWAN

Hewlett-Packard Far East Ltd.
Kaohsiung Office
2/F 68-2, Chung Cheng 3rd Road
KAOSHIUNG
Tel: (07) 241-2318
CH,CS,E

Hewlett-Packard Far East Ltd.
Taiwan Branch
8th Floor
337 Fu Hsing North Road
TAIPEI
Tel: (02) 712-0404

Telex: 24439 HEWPACK
Cable: HEWPACK Taipei
A,CH,CM,CS,E,M,P

Ing Lih Trading Co.
3rd Floor, 7 Jen-Ai Road, Sec. 2
TAIPEI 100
Tel: (02) 3948191
Cable: INGLIH TAIPEI
A

THAILAND

Unimesa
30 Patpong Ave., Suriwong
BANGKOK 5
Tel: 235-5727
Telex: 84439 Simonco TH
Cable: UNIMESA Bangkok
A,CH,CS,E,M
Bangkok Business Equipment Ltd.
5/5-6 Dejo Road
BANGKOK
Tel: 234-8670, 234-8671
Telex: 87669-BEQUIPT TH
Cable: BUSIQUIPT Bangkok
P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.
50/A Jerningham Avenue
P.O. Box 732
PORT-OF-SPAIN
Tel: 62-44213, 62-44214
Telex: 235,272 HUGCO WG
CME,M,P

TUNISIA

Tunisie Electronique
31 Avenue de la Liberte
TUNS
Tel: 280-144
E,P

Corema
1 ter. Av. de Carthage
TUNS
Tel: 253-821

Telex: 12319 CABAM TN
M

TURKEY

Teknim Company Ltd.
Iran Caddesi No. 7
Kavaklidere, **ANKARA**
Tel: 275800
Telex: 42155 TKNM TR
E

E.M.A.
Medina Eldem Sokak No.4 1/6
Yüksel Caddesi
ANKARA
Tel: 175 622
Telex: 42 591
M

UNITED ARAB EMIRATES

Emitac Ltd.
P.O. Box 2711
ABU DHABI
Tel: 82 04 19-20
Cable: EMITAC ABUDHABI
Emitac Ltd.
P.O. Box 1641
SHARJAH
Tel: 591 181
Telex: 68136 Emitac Sh
CH,CS,E,M,P

UNITED KINGDOM

GREAT BRITAIN

Hewlett-Packard Ltd.
Trafalgar House
Navigation Road
ALTRINCHAM
Cheshire WA14 1NU
Tel: 061 928 6422
Telex: 668068
A,CH,CS,E,M,MS,P

Hewlett-Packard Ltd.
Elstree House, Elstree Way
BOREHAMWOOD, Herts WD6 1SG
Tel: 01 207 5000
Telex: 8952716
E,CH,CS,P

Hewlett-Packard Ltd.
Oakfield House, Oakfield Grove
Clifton **BRISTOL**, Avon BS8 2BN
Tel: 0272 736806
Telex: 444302
CH,CS,E,P

Hewlett-Packard Ltd.
Bridewell House
Bridewell Place
LONDON EC4V 6BS
Tel: 01 583 6565
Telex: 298163
CH,CS,P

Hewlett-Packard Ltd.
Fourier House
257-263 High Street
LONDON COLNEY
Herts. AL2 1HA, St. Albans
Tel: 0727 24400
Telex: 1-8952716
CH,CS

Hewlett-Packard Ltd.
Pontefract Road
NORMANTON, West Yorkshire WF6 1RN
Tel: 0924 895566
Telex: 557355
CH,CS,P

Hewlett-Packard Ltd.
The Quadrangle
106-118 Station Road
REDHILL, Surrey RH1 1PS
Tel: 0737 68655
Telex: 947234
CH,CS,E,P

GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, SOLIHULL, West Midlands
390 48L
Tel: 021 745 8800
Telex: 339105
CH,CS,E,P

Hewlett-Packard Ltd.
West End House
41 High Street, West End
SOUTHAMPTON
Hampshire SO3 30Q
Tel: 04218 6767
Telex: 477138
CH,CS,P

Hewlett-Packard Ltd.
Eskdale Rd.
Winnersh, WOKINGHAM
Berkshire RG11 50Z
Tel: 0734 696622
Telex: 848884
E

Hewlett-Packard Ltd.
King Street Lane
Winnersh, WOKINGHAM
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178
A,CH,CS,E,M,MP,P
Hewlett-Packard Ltd.
Nine Mile Ride
Easthampstead, WOKINGHAM
Berkshire, RG11 3LL
Tel: 0344 773100
Telex: 848805
CH,CS,E,P

IRELAND

NORTHERN IRELAND

Hewlett-Packard Ltd.
Cardiac Services Building
35A Finaghy Road South
BELFAST BT10 0BY
Tel: 0232 625-566
Telex: 747626
CH,CS

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682
CH,CM,CS,E,M,P

UNITED STATES

Alabama

Hewlett-Packard Co.
700 Century Park South, Suite 128
BIRMINGHAM, AL 35226
Tel: (205) 822-6802
A,CH,M

Hewlett-Packard Co.
120 Wynn Drive
MONTVILLE, AL 35805
P.O. Box 7700
MONTVILLE, AL 35807
Tel: (205) 830-2000
CH,CM,CS,E,M*

Arizona

Hewlett-Packard Co.
3080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 889-4631
CH,E,MS**

California

Hewlett-Packard Co.
99 South Hill Or.
BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS

Hewlett-Packard Co.
P.O. Box 7830 (93747)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
CH,CS,MS

Hewlett-Packard Co.
P.O. Box 4230
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
320 S. Kellogg, Suite B
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
Telex: 910-325-6608
CH,CM,CS,MP

Hewlett-Packard Co.
3155 Porter Oaks Drive
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
4244 So. Market Court, Suite A
P.O. Box 15976
SACRAMENTO, CA 95852
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333
SAN DIEGO, CA 92139
Tel: (619) 279-3200
CH,CM,CS,E,MP

Hewlett-Packard Co.
2305 Camino Ramon "C"
SAN RAMON, CA 94583
Tel: (415) 838-5900
CH,CS

Hewlett-Packard Co.
3005 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0586
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91362
Tel: (213) 706-6800
E*,CH*,CS*

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
A,CH,CM,CS,E,MS

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida

Hewlett-Packard Co.
2901 N.W. 62nd Street
P.O. Box 24210
FORT LAUDERDALE, FL 33307
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
6177 Lake Ellenor Drive
P.O. Box 13910
ORLANDO, FL 32859
Tel: (305) 859-2900
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
5750B N. Hoover Blvd., Suite 123
P.O. Box 15200
TAMPA, FL 33614
Tel: (813) 884-3282
A*,CH,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hawaii

Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,MS

Illinois

Hewlett-Packard Co.
304 Eldorado Road
P.O. Box 1607
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,MS**

Hewlett-Packard Co.
1100 31st Street, Suite 100
DOWNERS GROVE, IL 60515
Tel: (312) 960-5760
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,MP

Indiana

Hewlett-Packard Co.
7301 No. Shadeland Avenue
P.O. Box 50807
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa

Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
CH,MS**

Kansas

Hewlett-Packard Co.
7804 East Funston Road, #203
WICHITA, KS 67207
Tel: (316) 684-8491
CH

Kentucky

Hewlett-Packard Co.
10300 Linn Station Road, #100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-862-1943
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,CH,CM,CS,E,MP

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A,C,CH,CS,CM,E,MP,P*
Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
CH,CS,E

Michigan

Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS

Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48064
Tel: (313) 643-6474
CH,CS

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Missouri

Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,CH,CS,E,MP



SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

Nebraska

Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
CM,MS

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07652
Tel: (201) 265-5000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
60 New England Av. West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico

Hewlett-Packard Co.
11300 Lomas Blvd., N.E.
P.O. Box 11634
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH,CS,E,MS

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A,CH,E,MS

Hewlett-Packard Co.
9600 Main Street
P.O. Box AC
CLARENCE, NY 14031
Tel: (716) 759-8621
CH

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
CH,CM,CS,E,MS

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0800
CH,CS,E*,M*

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 684-6100
CM,CH,CS,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
A,CH,CM,CS,E,MS

North Carolina

Hewlett-Packard Co.
5605 Roanne Way
P.O. Box 26500
GREENSBORO, NC 27420
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
Eff. Nov. 25, 1983
675 Brooksedge Blvd.
WESTERVILLE, OH 43081
CH,CM,CS,E*

Hewlett-Packard Co.
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS

Oklahoma

Hewlett-Packard Co.
304 N. Meridian, Suite A
P.O. Box 75609
OKLAHOMA CITY, OK 73147
Tel: (405) 946-9499
A*,CH,E*,MS

Hewlett-Packard Co.
3840 S. 103rd E. Avenue, #100
P.O. Box 35747
TULSA, OK 74153
Tel: (918) 665-3300
A**,CH,CS,M*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
P.O. Box 328
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
111 Zeta Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP
Hewlett-Packard Co.
2750 Monroe Boulevard
P.O. Box 713
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A,CH,CM,E,M

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
P.O. Box 21708
COLUMBIA, SC 29221
Tel: (803) 732-0400
CH,E,MS

Hewlett-Packard Co.
Koger Executive Center
Chesterfield Bldg., Suite 124
GREENVILLE, SC 29615
Tel: (803) 297-4120

Tennessee

Hewlett-Packard Co.
224 Peters Road, Suite 102
P.O. Box 22490
KNOXVILLE, TN 37922
Tel: (615) 691-2371
A*,CH,MS

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Texas

Hewlett-Packard Co.
4171 North Mesa
Suite C-110
EL PASO, TX 79902
Tel: (915) 533-3555
CH,E*,MS*

Hewlett-Packard Co.
10535 Harwin Drive
P.O. Box 42816
HOUSTON, TX 77042
Tel: (713) 776-6400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
930 E. Campbell Rd.
P.O. Box 1270
RICHARDSON, TX 75080
Tel: (214) 231-6101
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
1020 Central Parkway South
P.O. Box 32993
SAN ANTONIO, TX 78216
Tel: (512) 494-9336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
4305 Cox Road
GLEN ALLEN, VA 23060
P.O. Box 9669
RICHMOND, VA 23228
Tel: (804) 747-7750
A,CH,CS,E,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98006
Tel: (206) 643-4000
A,CH,CM,CS,E,MP
Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99212
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
4604 MacCorkle Ave.
P.O. Box 4297
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 784-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e l.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CM,E,M

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3RA Transversal Los Ruices Norte
Edificio Segre 1, 2 & 3
Apartado 50933
CARACAS 1071
Tel: 239-4133
Telex: 251046 HEWPACK
A,CH,CS,E,MS,P

Hewlett-Packard de Venezuela C.A.
Calle-72-Entre 3H y 3Y, No. 3H-40
Edificio Ada-Evelyn, Local B
Apartado 2646
4001, MARACAIBO, Estado Zulia
Tel: (061) 80.304
C,E*

Hewlett-Packard de Venezuela C.A.
Calle Vargas Rondon
Edificio Seguros Carabobo, Piso 10
VALENCIA
Tel: (041) 51 385
CH,CS,P

Bioelectronica Medica C.A.
Calle Buen Pastor
Edif. Cota Mil-Piso 2 y Semi Sotano 1
Boleita Norte
Apartado 50710 CARACAS 1050A
Tel: 239 84 41
Telex: 26518

ZIMBABWE

Field Technical Sales
45 Kelvin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,M,P

July 1983 5952-6900

Indicates main office

HP distributors are printed in italics.

